

## FEATURES

- 4.1" capacitive color touch panel (320x240 pixels)
- Available in the following colors: silver (Pantone 10105C), anthracite black (Pantone Black U), white (NCS 500-N) and gloss white (Pantone RB82798)
- 16 million color LCD display
- Up to 12 configurable pages
- Up to 96 configurable direct control and/or indicator functions
- 2 independent thermostats
- 2 analog/digital inputs
- Customized device orientation (Vertical or Horizontal)
- Built-in temperature sensor
- Real Time Clock (RTC) with watch battery and NTP support
- External 12-29 VDC power supply
- Integrated KNX BCU (TP1-256)
- Mini-USB and Ethernet connection
- Magnetic fit
- Complete data saving in case of power failure
- Conformity with the CE, UKCA, RCM directives (marks on the back side)

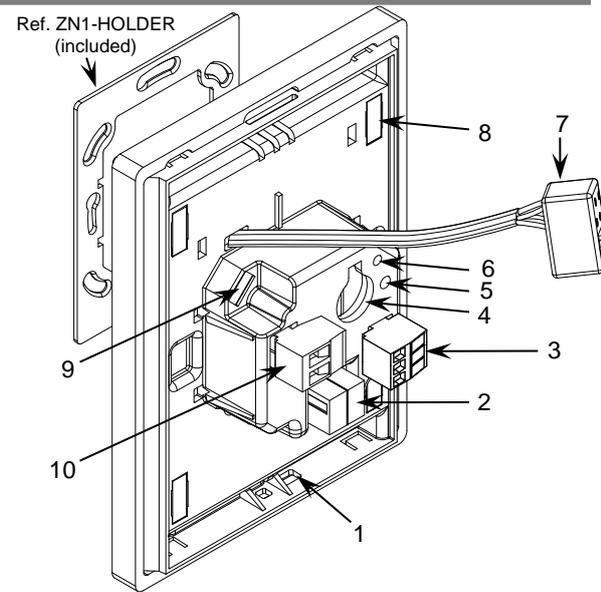


Figure 1: Z41 Pro

|                      |                       |                    |                       |                                     |
|----------------------|-----------------------|--------------------|-----------------------|-------------------------------------|
| 1. Temperature probe | 2. KNX connector      | 3. Input connector | 4. Battery            | 5. Programming button               |
| 6. Programming LED   | 7. Ethernet connector | 8. Magnet          | 9. Mini-USB connector | 10. External power supply connector |

Programming button: short press to set programming mode. If this button is held while plugging the device into the KNX bus, it enters the safe mode.

Programming LED: programming mode indicator (red). When the device enters the safe mode, it blinks (red) every half second. During the start-up (reset or after KNX bus failure) and if the device is not in safe mode, it emits a red flash.

## GENERAL SPECIFICATIONS

| CONCEPT                           |                     | DESCRIPTION  |             |     |
|-----------------------------------|---------------------|--|-------------|-----|
| Type of device                    |                     | Electric operation control device  |             |     |
| KNX supply                        | Voltage (typical)   |  | 29 VDC SELV |     |
|                                   | Voltage range       |  | 21-31 VDC   |     |
|                                   | Maximum consumption | Voltage  | mA          | mW  |
|                                   |                     | 29 VDC (typical)   | 6           | 174 |
| 24 VDC <sup>1</sup>               | 10                  | 240  |             |     |
| Connection type                   |                     | Typical TP1 bus connector for 0.8 mm Ø rigid cable   |             |     |
| External power supply             |                     | 12-29 VDC. Maximum consumption: 250 mA (12 VDC), 112 mA (24 VDC), 86 mA (29 VDC). Do not connect 29 VDC KNX bus as external power supply               |             |     |
| Operation temperature             |                     | 5 .. +45 °C  |             |     |
| Storage temperature               |                     | -20 .. +55 °C  |             |     |
| Operation humidity                |                     | 5 .. 95%   |             |     |
| Storage humidity                  |                     | 5 .. 95%   |             |     |
| Complementary characteristics     |                     | Class B  |             |     |
| Protection class                  |                     | III  |             |     |
| Operation type                    |                     | Continuous operation   |             |     |
| Device action type                |                     | Type 1   |             |     |
| Electrical stress period          |                     | Long   |             |     |
| Degree of protection              |                     | IP20, clean environment  |             |     |
| Installation                      |                     | Portrait or landscape position, with the temperature sensor at the bottom or right, respectively. Magnetic fit. See Installation instructions section. |             |     |
| Minimum clearances                |                     | Please, keep away from heat and cold air flows to get better temperature measurements.   |             |     |
| Response on KNX bus failure       |                     | Data saving according to parameterization. Initialization screen.  |             |     |
| Response on KNX bus restart       |                     | Data recovery according to parameterization  |             |     |
| Response on power supply failure  |                     | Complete data saving. Display is switched off  |             |     |
| Response on power supply recovery |                     | Current data recovery  |             |     |
| Operation indicator               |                     | Several on display as programmed   |             |     |
| Accessories                       |                     | RJ45 cable connector (included). Mini USB A-B cable Ref. ZN1AC-UPUSB (not included)  |             |     |
| Weight                            |                     | 237 g (Al) / 226 g (PC)  |             |     |
| PCB CTI index                     |                     | 175 V  |             |     |
| Housing material                  |                     | PC+ABS FR V0 halogen free  |             |     |

<sup>1</sup> Maximum consumption in the worst-case scenario (KNX Fan-In model).

## INTERNAL TEMPERATURE SENSOR AND CLOCK SPECIFICATIONS

| CONCEPT     | DESCRIPTION  |   |
|-------------|--|---|
| Temp. Probe | Measuring range  | -10 .. 50 °C  |
|             | NTC accuracy (@ 25 °C)                                   | ±0.5 °C   |
|             | Temperature resolution                                   | 0.1 °C  |
|             | Calibration  | The temperature sensor should be calibrated through the application program according to the external power supply connected. <b>Moreover, to avoid fluctuations in the temperature measurement, the flush-mounted box must be completely sealed once the cables are inside. Airtight boxes, polyurethane foam, silicone rubber or similar non-breathable construction materials can be used.</b> |
| Clock       | Accuracy   | 1 minute in display / 1 second in KNX bus   |
|             | Precision  | 30 ppm  |
|             | Power supply   | CR1225 3V battery   |
|             | Data/time Set  | Manual (set from screen) or auto (through KNX clock telegrams in bus or NTP server)   |
|             | Response on power failure (bus or external power supply) | It does not affect to internal clock  |
|             | Response on power recovery                               | The internal error shows current time   |

## EXTERNAL POWER SUPPLY AND PORTS SPECIFICATIONS AND CONNECTIONS

| CONCEPT                             | DESCRIPTION  |
|-------------------------------------|--|
| Power supply voltage                | 12-29 VDC  |
| Connection method                   | Pluggable screw terminal block (0.4 Nm max.)   |
| Cable cross-section of power supply | 0.2-2.5 mm <sup>2</sup> (IEC) / 22-12 AWG (UL)   |
| USB Connector                       | Mini USB type A connector. Version 2.0. Do not connect to PC, hard drives or other devices with consumption higher than 150 mA.<br>Please refer to the user manuals at <a href="http://www.zennio.com">www.zennio.com</a> for details on how to upgrade the firmware through this port. The information about the underlying software licenses can be downloaded through the USB port by connecting a flash memory drive containing an empty folder named Z41_LICENSE (please ensure that the firmware version is 3.4.3 or greater). |
| Ethernet Connector                  | RJ45 connector with 4 poles: Rx(+), Rx(-), Tx(+) and Tx(-).<br>To use this port, consult the Manual for Firmware Update at <a href="http://www.zennio.com">www.zennio.com</a> .  |

## INPUTS SPECIFICATIONS AND CONNECTIONS


| CONCEPT                             | DESCRIPTION                                    |
|-------------------------------------|--|
| Number of inputs                    | 2  |
| Inputs per common                   | 2  |
| Operation voltage                   | +3.3 VDC in the common                         |
| Operation current                   | 1 mA @ 3.3 VDC (per input)                     |
| Switching type                      | Dry voltage contacts between input and common  |
| Connection method                   | Pluggable screw terminal block (0.2 Nm max.)   |
| Cable cross-section                 | 0.2-1.5 mm <sup>2</sup> (IEC) / 28-14 AWG (UL) |
| Maximum cable length                | 30 m   |
| NTC probe length                    | 1.5 m (extensible up to 30 m)                  |
| NTC accuracy (@ 25 °C) <sup>2</sup> | ±0.5 °C  |
| Temperature resolution              | 0.1 °C   |
| Maximum response time               | 10 ms  |

<sup>2</sup> For Zennio temperature probes.


\* In case of using ZN110-DETEC-P sensor, its micro switch number 2 must be in **Type B position**.

Any combination of the following accessories is allowed in the inputs:

### Temperature Probe

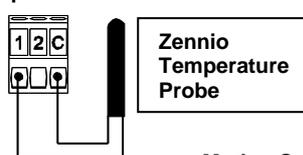

### Switch/Sensor Push button

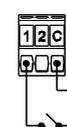

### Motion Sensor




Up to two motion sensors can be plugged into the same device input (parallel wiring)

Screw terminal for connecting Zennio motion sensors\*

## INSTALLATION INSTRUCTIONS

- Place the metallic piece into a square or rounded standard mounting box with screws.
- Connect the KNX bus, inputs and Ethernet at the rear of Z41 Pro, as well as the external power.
- Once it is connected, fit Z41 Pro in the metal platform. The device is fixed through the magnets.
- Slid Z41 Pro downwards to fix it with the security anchorage system. Check, from the side, that nothing unless Z41 Pro outline can be seen (the metal platform should be completely hidden by Z41 Pro).
- In case of landscape configuration, please follow the steps considering a 90° counter-clockwise rotation.

To uninstall proceed in the reverse way.

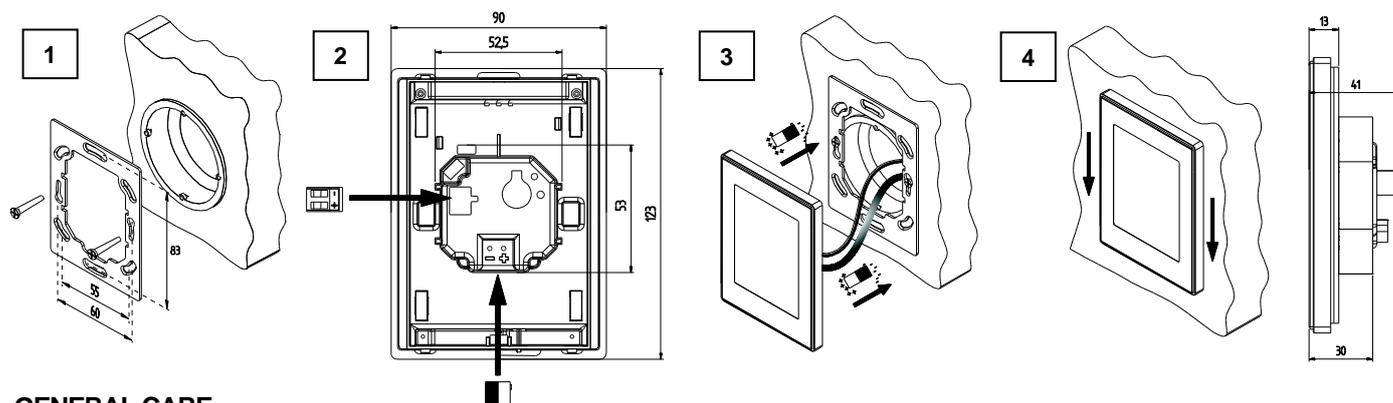

## GENERAL CARE

- Do not use aerosol sprays, solvents, or abrasives that might damage the device.
- Clean the product with a clean, soft, damp cloth.

## SAFETY INSTRUCTIONS AND ADDITIONAL NOTES

- Installation should only be performed by qualified professionals according to the laws and regulations applicable in each country.
- Do not connect the mains voltage nor any other external voltage to any point of the KNX bus; it would represent a risk for the entire KNX system. The facility must have enough insulation between the mains (or auxiliary) voltage and the KNX bus or the wires of other accessories, in case of being installed.
- Keep the device away from water (condensation over the device included) and do not cover it with clothes, paper or any other material while in use.
- The WEEE logo means that this device contains electronic parts and it must be properly disposed of by following the instructions at <https://www.zennio.com/en/legal/weee-regulation>.